 


Russell Hobbs

INSTRUCTIONS AND WARRANTY

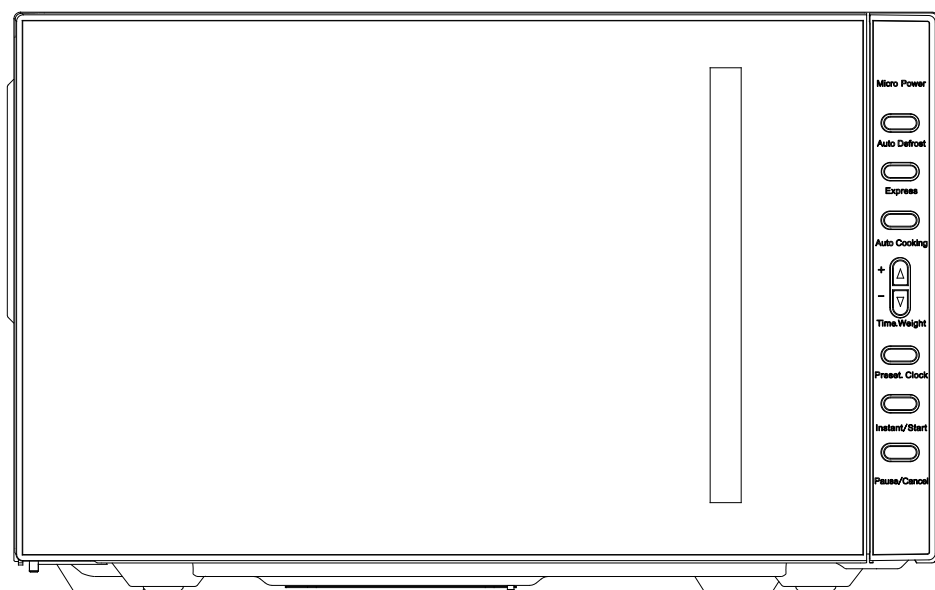

MODEL NO. RHEM22L
RUSSELL HOBBS 20L ELECTRONIC MICROWAVE OVEN

Congratulations on purchasing our Russell Hobbs 20L Electronic Microwave Oven. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS 20L ELECTRONIC MICROWAVE OVEN

- 20L capacity
- Digital LED display with clock
- Power output: 700W
- 5 power levels
- Programmable multi-stage cooking
- 8 Auto menus: popcorn $\geq 85\text{g}$, popcorn $\geq 100\text{g}$, Pizza, Beverage $\geq 250\text{ml}$, Beverage $\geq 500\text{ml}$, Potato $\Rightarrow 0.85\text{kg}$, Potato $\Rightarrow 0.65\text{kg}$ and Fish
- 60 minute cooking timer with end signal
- Defrost by weight
- With quick start and delay start functions
- Elegant mirror finish front
- Stainless steel control panel
- 245mm glass turntable diameter
- Easy to use pull handle door
- Unit dimensions: 424 x 263 x 353mm
- Unit weight: 10.5kg
- Child lock function
- For domestic use only

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.

3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. Close supervision is required when any appliance is used near or by children or invalids.
7. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
8. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
9. Do not operate the oven when empty.
10. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
13. Do not operate the microwave unit without any food contents inside the cavity.
14. To reduce the risk of fire in the oven cavity:
 - ✧ When heating food in a plastic or paper container, check the oven frequently in terms of the possibility of ignition.
 - ✧ Remove wire twist-ties from paper or plastic bags before placing the bag in oven.
 - ✧ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - ✧ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.

WARNING: Liquid or other food must not be heated in sealed containers since they are able to explode.

15. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
16. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in burns.
17. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
18. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
19. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns or scalding.
20. Cooking utensils may become hot because of heat transferred from the heated food. Potholders/ oven gloves may be needed to handle the utensil.
21. Utensils should be checked to ensure that they are suitable for use in microwave oven.
22. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
23. This product is Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
24. Never immerse the unit in water or any other liquid for cleaning purposes.
25. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
26. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
27. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
28. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
29. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.

30. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
31. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
32. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
33. DO NOT carry the appliance by the power cord.
34. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
35. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
36. Ensure that the switch is in the "Off" or "0" position after each use.
37. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
38. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.
39. The microwave oven should not be placed in a cabinet unless it has been tested in a cabinet.
40. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
41. The door or the outer surface may get hot when the appliance is in operation.
42. The rear surface of the appliance should be placed against a wall.

 
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY
<ul style="list-style-type: none">• Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.• Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
 - a. Door (bent),
 - b. Hinges and latches (broken or loosened),
 - c. Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- If the microwave appliance is not maintained in a good state of cleanliness, its surface could become degraded, its lifespan affected and could result in a possibly hazardous situation.

INSTALLATION


1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.

For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 30cm at back and 20cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet. To ensure that there is sufficient distance between the microwave and the wall, it is necessary to install a distance limiter:

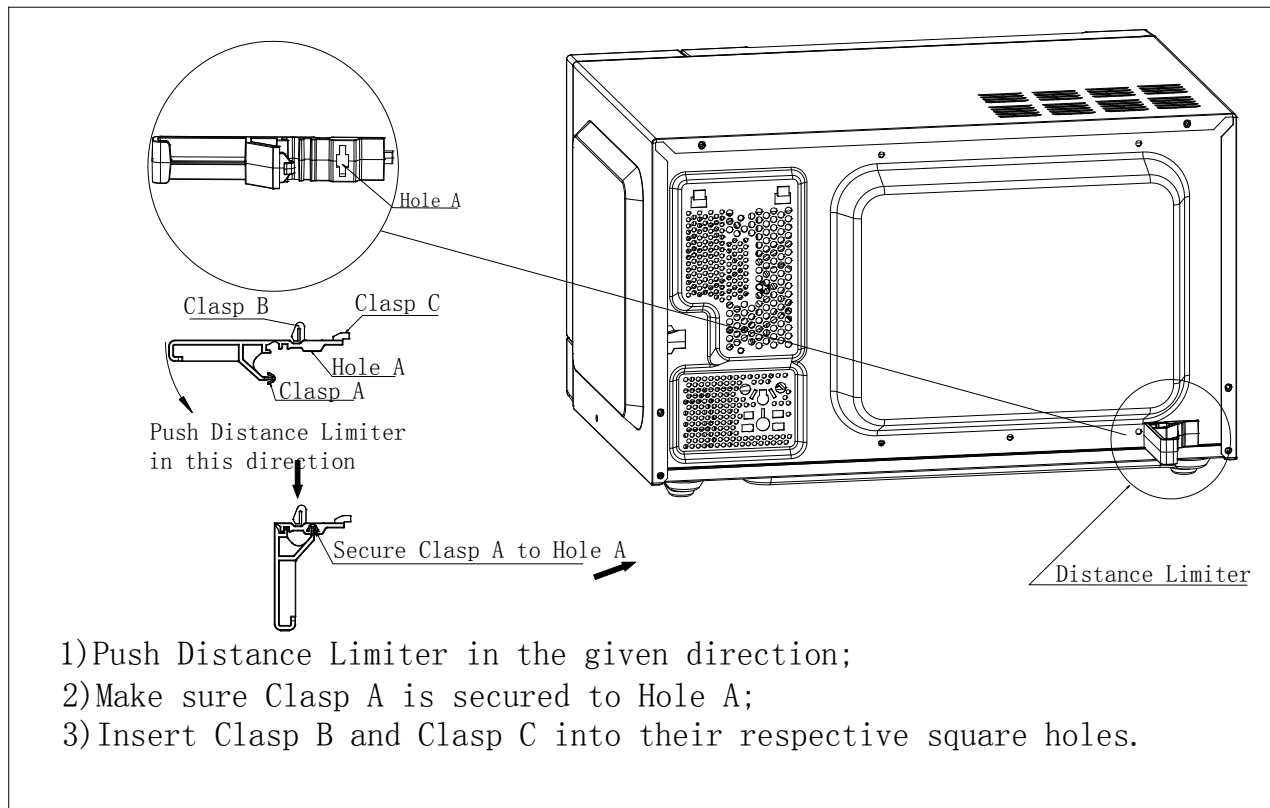

5. Do not operate the oven without a glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Blocking the intake and/or outlet openings can damage the oven.
9. Remove any protective film found on the microwave cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.
10. Never place the glass tray upside down. The glass tray should never be restricted.
11. Both glass tray and turntable ring assembly must always be used during cooking.
12. All food and containers are always to be placed on the glass tray for cooking.
13. If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

 TURNTABLE INSTALLATION

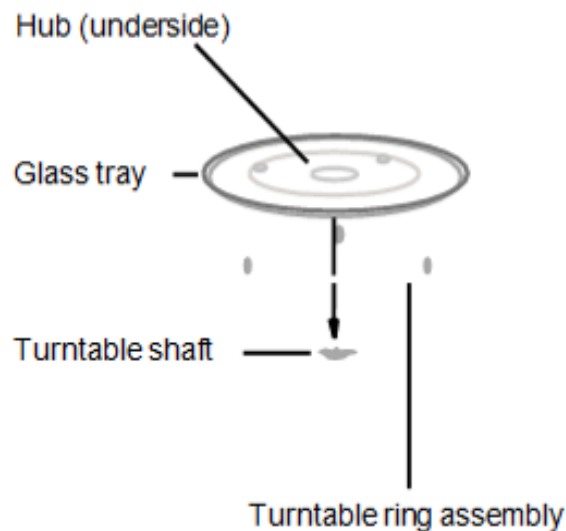

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

- Clean the door and sealing surface of the oven.
- Reposition the receiving antenna of the radio or television.
- Relocate the microwave oven with respect to the receiver.
- Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

MICROWAVE COOKING PRINCIPLES

- Arrange food carefully. Place thickest areas towards outside of dish.
- Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.

- Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
- Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.


UTENSILS GUIDE

- The ideal material for a microwave utensil is material which is transparent. This allows energy to pass through the container and heat the food.
- A microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
- Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
- The list below is a general guide to help you select the correct utensils:


COOKWARE	MICROWAVE
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Paper Kitchen Towels	Yes
Metal Tray	No
Metal Rack	No
Aluminium Foil & Foil Containers	No
Parchment Paper	Yes

Plastic Wrap	Yes
Wax Paper	Yes
Containers containing metal parts	No
Metal Twist-ties	No
Paper Bags	No
Plastic Foam	No
Wood	No

 PARTS DIAGRAM

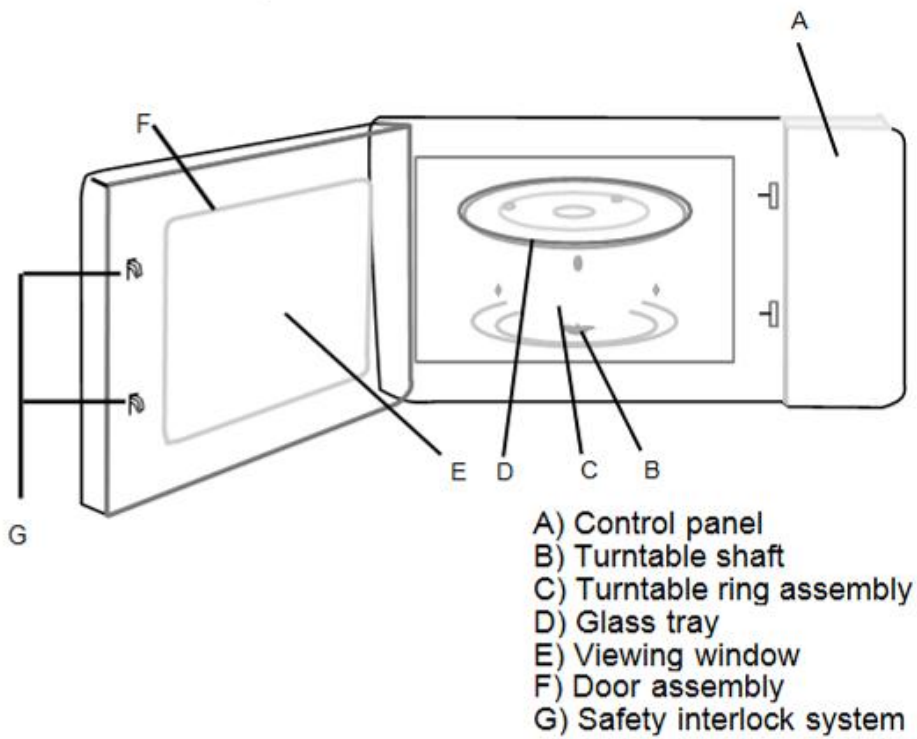

CONTROL PANEL

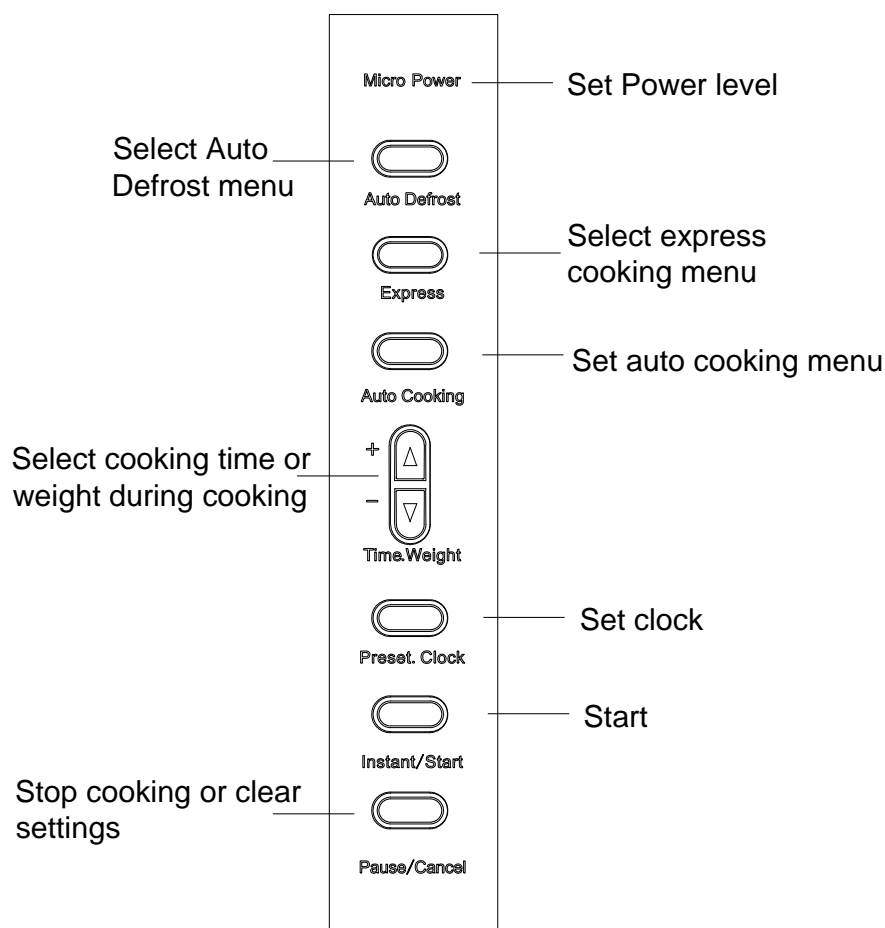 

OPERATING INSTRUCTIONS

HOW TO SET THE OVEN CONTROLS

The LED display will flash 3 times once the microwave has been plugged into a power supply.

The display will flash “ : ”, prompting you to input the cooking menu and time.

Each time a button is pressed, a beep or alert tone will sound to acknowledge the selection.

SETTING THE DIGITAL CLOCK

FOR EXAMPLE: Suppose you want to set the clock time to 8:30am.

1. Once the oven is plugged in, switched on and ready for input, the LED display will show “.”.
2. Press the Preset. Clock button once and the display will show “00:00”.
3. Press the Auto cooking/Time. Weight button to set the amount of hours. Once selected, the display will show “08:00”.
4. Press the Preset. Clock button again.
5. Now press the Auto cooking/Time. Weight button to set the amount of minutes. Once selected, the display will show “08:30”.
6. To save your selection, press the Preset. Clock button once or wait for five (5) seconds. The time on the numbers will no longer flash.

Note:

- If the clock is not programmed/ set by the user then it will not show when the microwave is switched on.
- During the process of setting the clock, if you press the Pause/ Cancel button, the oven will revert to the previous status automatically and clear your clock selection.

MICROWAVE COOKING

This function is used for cooking and heating food. Press the Micro Power button, the LED display will cycle through and show 100P—80P—60P—40P—20P each time it is pressed.

Microwave Power Chart:

Microwave Power	Display
High power 100% microwave power Applicable for quick and thorough cooking.	100P
Medium High power 80% microwave power Applicable for medium express cooking.	80P
Medium power	60P

60% microwave power Applicable for steaming food.	
Medium Low power 40% microwave power Applicable for defrosting food.	40P
Low power 20% microwave power Applicable for keeping warm.	20P

Note that the longest cooking time is 60 minutes.

Example: to cook at 80P for 10 minutes

1. After power up, a colon will flash on the LED display “:”.
2. Select the desired microwave power by pressing the Micro Power button consecutively until you reach “80P”.
3. Set the amount of desired cooking time that you require by pressing the Auto cooking/ Time. Weight button until you reach “10:00”.
4. Press the Instant/ Start button to start and the LED display will count down to show a ‘running’ time throughout the cooking process.

You can change the cooking time during the cooking cycle. If you have had to interrupt the cooking cycle, for example to turn the food, press the Instant/Start button once and the cooking process will continue. If you intend to remove the food earlier than what has been selected (e.g. the preset time which you originally selected for cooking), you must press the Pause/Cancel button once in order to clear your selections so as to avoid unintended operation of next time use.

EXPRESS FUNCTION

This feature allows you to start the microwave quickly. This function will allow you to heat food or beverages conveniently, omitting the steps of setting the ‘cooking’ time.

1. In standby mode, press the Express button to cook with 100% microwave power for a 30

second duration. Each time you press the same button then the cooking period will increase by 30 seconds e.g. 00:30, 01:00 and 01:30. The maximum cycle time is 01:30, one minute and thirty seconds.

2. After choosing the desired Express cycle, press the Instant/ Start button to confirm your selection and start the process.

During the microwave cooking cycle, you can press the Express button to increase the cooking period of time. If using an auto cooking menu or the defrost-by weight then the cooking or defrost period of time cannot be increased.

DEFROST (BY-WEIGHT)

The time and the defrosting power levels are adjusted automatically once the weight is programmed in.

1. In standby mode, press the Auto Defrost button to select the type of food. The LED display will show d.1. Each time you press this button it will cycle through the options: d.1 d.2 and d.3

d.1	For defrosting meat, the weight range from 0.1 to 2.0 kg.
d.2	For defrosting poultry, the weight range from 0.2 to 3.0kg.
d.3	For defrosting seafood, the weight range from 0.1 to 0.9kg.

2. Press the Auto cooking/ Time. Weight button to set the defrost weight.
3. Start the defrosting process by pressing the Instant/ Start button.
4. Half way through the defrosting process, three (3 beeps) will sound. This sound is to prompt you to turn the food over. Open the door and turn the food over. Once the door is closed again, press the Instant/ Start button again to continue defrosting.

Note

- It is necessary to turn the food during the defrost cycle in order to obtain a uniform effect.
- Usually defrosting will need a longer time than that of cooking the food.

- The defrosting process can be considered complete if you are able to easily cut the food with a knife. A microwave will normally penetrate around 4cm into most food.
- Defrosted food should be consumed as soon as possible. It is not advised to put them back into the freezer.

IN MULTI STAGE COOKING

To obtain the best cooking result, some recipes call for different cooking modes and amount of cooking times. You can program your personalized menu by using multi-stage cooking

A maximum of four (4) stages can be set. When one has completed, the oven will begin the next operation automatically.

For example, you would like to cook food with 100P microwave power for three (3) minutes then 20P microwave power for nine (9) minutes. This would be considered as setting only two (2) stages.

To program the first selection – 100P microwave for three (3) minutes.

1. Press the Micro Power button to select the power level and set it to 100P.
2. Press the Auto Cooking/ Time. Weight button to set the amount of cooking time. In this example it will be set to 03:00.

Now program the second selection – 20P microwave for nine (9) minutes.

3. Press the Micro Power button to select the desired power level – 20P.
4. Press the Auto Cooking/ Time. Weight button to set the amount of cooking time – 09:00.
5. Start the multi-stage cooking process by pressing the Instant/ Start button.

Note

- If one stage is defrosting, it should be inputted in at the first stage.
- The auto cooking menu cannot be set as a selection of multi-stage cooking.

PRESET (DELAYED START) FUNCTION

If you do not want the cooking cycle to start immediately, you can preset the cooking menu and time. By doing this, your cooking selection will automatically start at a time you prefer. This can be done in two steps:

1. Setting the current clock;
2. Setting the cooking menu and time.

For example, now it is 12:30. If you would like for the oven to start automatically at 100P microwave power for 9 minutes and 30 seconds but only do so at 14:20. Follow these steps:

Step 1 – Setting the current clock

1. In standby mode, press the Preset. Clock button. The display will show “00:00”.
2. Set hours by pressing the Time. Weight button. The display will show “12:00”.
3. Press the Preset. Clock button again to confirm the hours.
4. Set the minutes by pressing the Auto Cooking/ Time. Weight button. The display will show 12:30.
5. Press the Preset. Clock button once or wait for five (5) seconds to confirm the selection.

Step 2 - Set the cooking menu and time

6. Select the cooking power by pressing the Micro Power button. The display will show 100P.
7. Press the Auto Cooking/ Time. Weight button to set the amount of cooking time required. The display will show 09:30
8. Press and hold the Clock button for three (3) seconds to return to the current clock.
9. Set the time you expect to start. Repeat the steps 2-4.

10. Press the Clock button to confirm the delayed start menu. Now the program has been activated and the cooking process will start at 14:30 in the afternoon.
11. You may check the starting time at any time by pressing the Clock button.

Note: The digital clock must be set/ programmed by the user. If it is not set/ programmed, then the delay start function will not work.

AUTO COOKING MENU

The oven has a default auto cooking menu for simple operation.

- During standby mode, press the Auto Cooking button and the LED display will cycle options as follows: A.1, A.2 A.8
- Start the cooking process by pressing the Instant/ Start button. The LED display will count down to show the 'running' time.

Choose the appropriate menu according to the food type and weight. Strictly observe the directions in the table below.

Display	Type	Method
A.1	Popcorn	Suitable for a bag of corn at approximate weight 85g. If the 'popping' speed has decreased to one (1) pop per two (2) second interval then the popcorn is probably ready. Press the Pause/ Cancel button to stop the microwave and popping process.
A.2	Popcorn	Same as A.1 except 100g weight.
A.3	Pizza	Warm a piece of chilled pizza of 0.15kg.
A.4	Beverage	Heating a cup of 250 ml liquid. The liquid temperature is about 5-10°C. Use a big mouthed cup and do not seal it.
A.5	Beverage	Heating a cup of 500 ml liquid. The liquid

		temperature is about 5-10°C. Use a big mouthed cup and do not seal it.
A.6	Potato	Use to cook strips of potato chips. Ensure that they are cut into 5mm width, height and length. The total weight should be at about 0.45kg. Place the strips on a large dish and cover the dish with a thin film to prevent water loss.
A.7	Potato	Same as A.6 except the weight of potato strips are about 0.65kg.
A.8	Fish	Suitable for steaming a fish of 0.45kg. After the fish has been washed and scales removed, make slits on the skin of the fish. Put the fish on a shallow dish of 22-27cm in diameter. Sprinkle lightly with some herbs and spices. Cover the dish with a thin film to prevent water loss. After cooking, let it settle/ stand for 2 minutes.

- The ambient temperature of food before cooking should be at approximately 20-25°C. Higher or lower temperatures of the food before cooking would require an increase or decrease of cooking time.
- The temperature, weight and shape of food will largely influence the cooking effect. If any differences have been found in relation to the factors noted on the above table, you will need to adjust the cooking time for best results.

CHILD LOCK

Use the Child Lock feature to prevent unsupervised operation of the microwave by children. All the buttons will be rendered inoperable in this mode.

To set the CHILD LOCK: Press and hold the Pause/ Cancel button for about three (3) seconds.

The display will show OFF.

To cancel the CHILD LOCK: Press and hold the Pause/ Cancel button for about three (3) seconds. The display will revert to normal.

GETTING TO KNOW YOUR NEW MICROWAVE

Once the cooking/ defrost selection has finished, the LED display will show the words “End” and three beeps will sound to prompt you that the process has completed and to take out the food or drink. If you do not press the Pause/Cancel button once or open the door, the beep will sound at an interval of every three (3) minutes.

TROUBLE SHOOTING

Normal	
Dim oven light	During cooking with low microwave power, the oven light may become dim. It is normal.
Steam accumulating on door/ hot air out of vents	Foods may generate steam during the cooking process. Most steam will escape via the vents however some may accumulate on the oven door. This is normal.

Trouble	Possible Cause	Remedy
Microwave does not start up	(1) Power cord not plugged in correctly	Unplug. Then plug in again after 10 seconds
	(2) Fuse blowing or circuit breaker works	Replace the fuse or reset the circuit breaker (repaired by Home of Living Brands (Pty) Ltd. Service Department)

	(3) Trouble with the power outlet	Test the power outlet with other electrical appliances
Microwave does not heat	(4) The door is not closed properly	Close the door well
Glass turntable makes noise when microwave is in operation	(5) Dirty roller and cavity bottom	Refer to "Cleaning and Maintenance" section of the instruction manual to clean dirty or soiled parts.

According to the Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time you need to dispose of this product, please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Turn off the oven and remove the power plug from the wall socket before cleaning.
- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides as well as the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.

- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
- It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water or in a dishwasher.
- The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild soapy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
- Remove odors from your oven by combining a cup of water with the juice and rind of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
- The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Amalgamated Appliance (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

 
CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on 230V~240V current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth
Blue = Neutral
Brown = Live

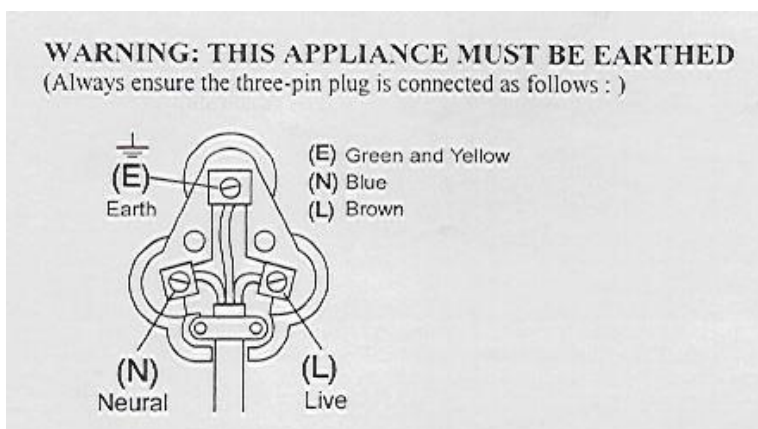

W A R R A N T Y

1. Home of Living Brands (Pty) Limited warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD
www.homeoflivingbrands.com

011 490-9600 (Jhb)
031 792-6000 (Dbn)
021 552-5161 (CT)

www.russellhobbs.co.za
www.facebook.com/RussellHobbsSA